Tools Needed

1 Place house numbers in desired location and mark holes.

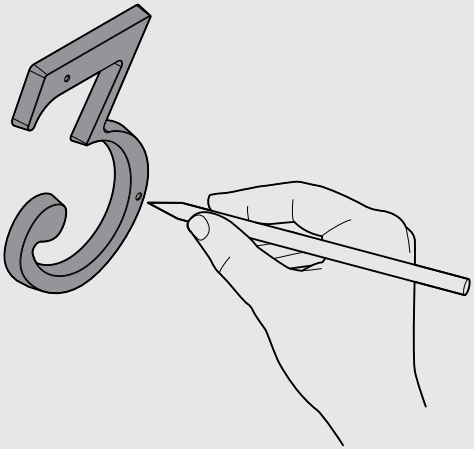

2 Drill pilot holes if needed. Secure with supplied screws.

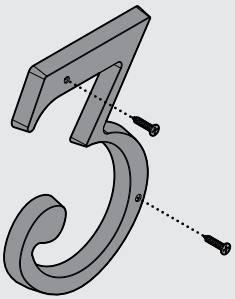

Copyright © 2012 Baldwin Hardware Corporation